
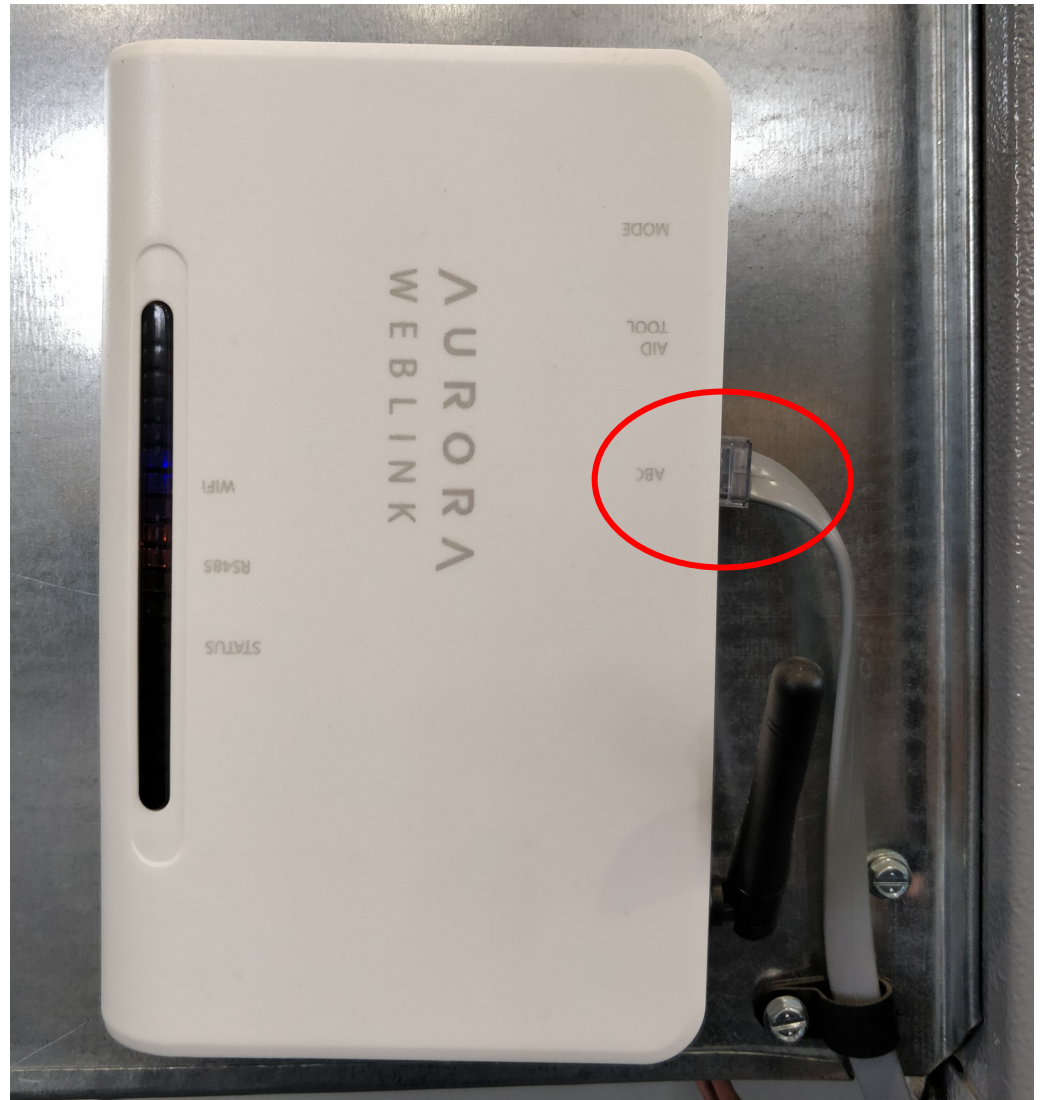





AWL - Symphony

Reconnecting with new WiFi-Network


1. Disconnect the grey Wire from the port labeled "ABC"
2. Wait 60 seconds
3. Reconnect the grey Wire at the port labeled "ABC"

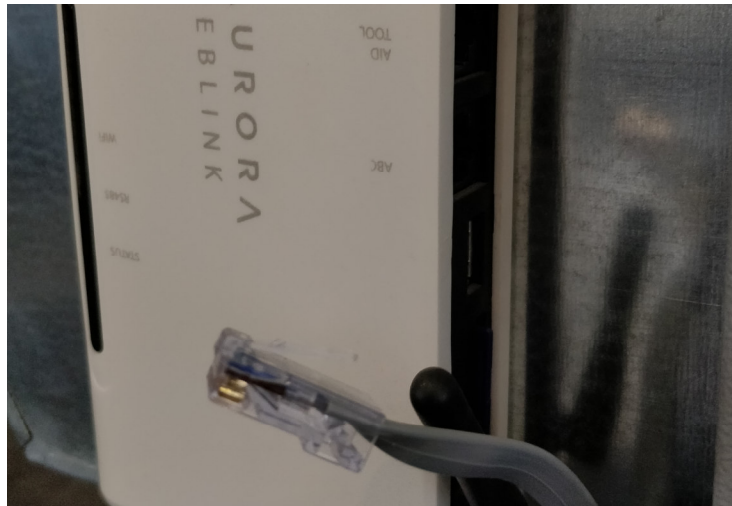


4. Take a paperclip and bend it open
5. Take the paperclip and push the marked button on the AURORA Weblink.
The button will have a light resistance.
Hold the button pushed for 10 seconds.
6. The green STATUS light will start flashing fast.
Release the button.

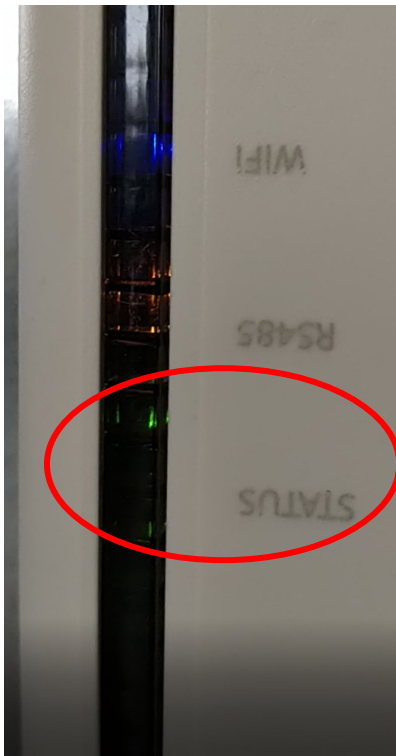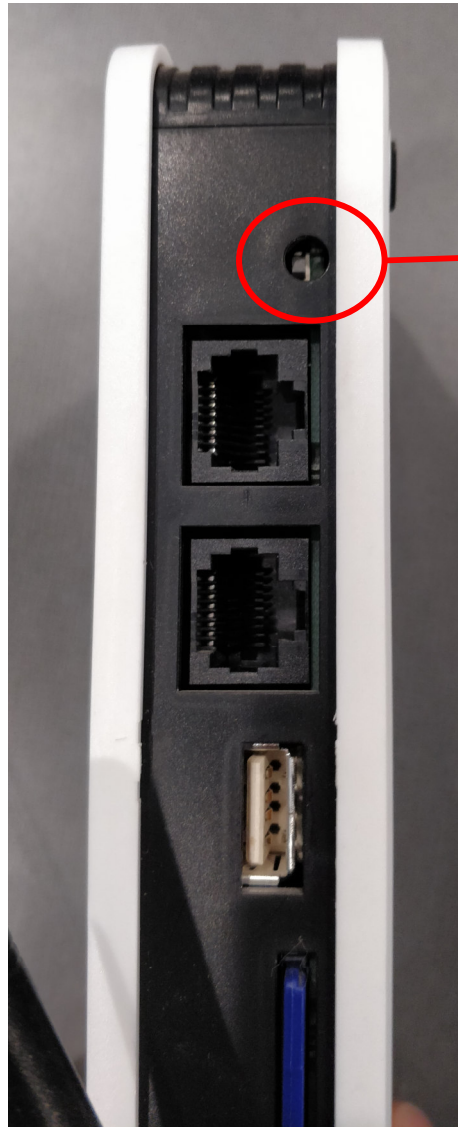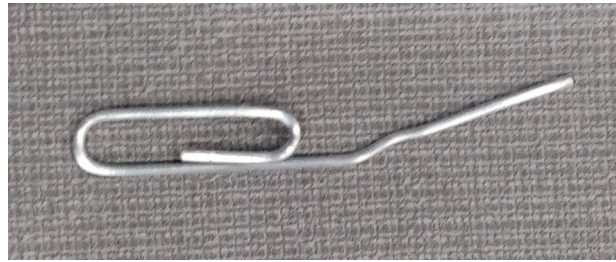


7. Take your phone or tablet and turn off the mobile data.
8. Then go to the WiFi settings and connect to the Network with the name "AWL-..." The numbers behind AWL are different for each individual Unit.

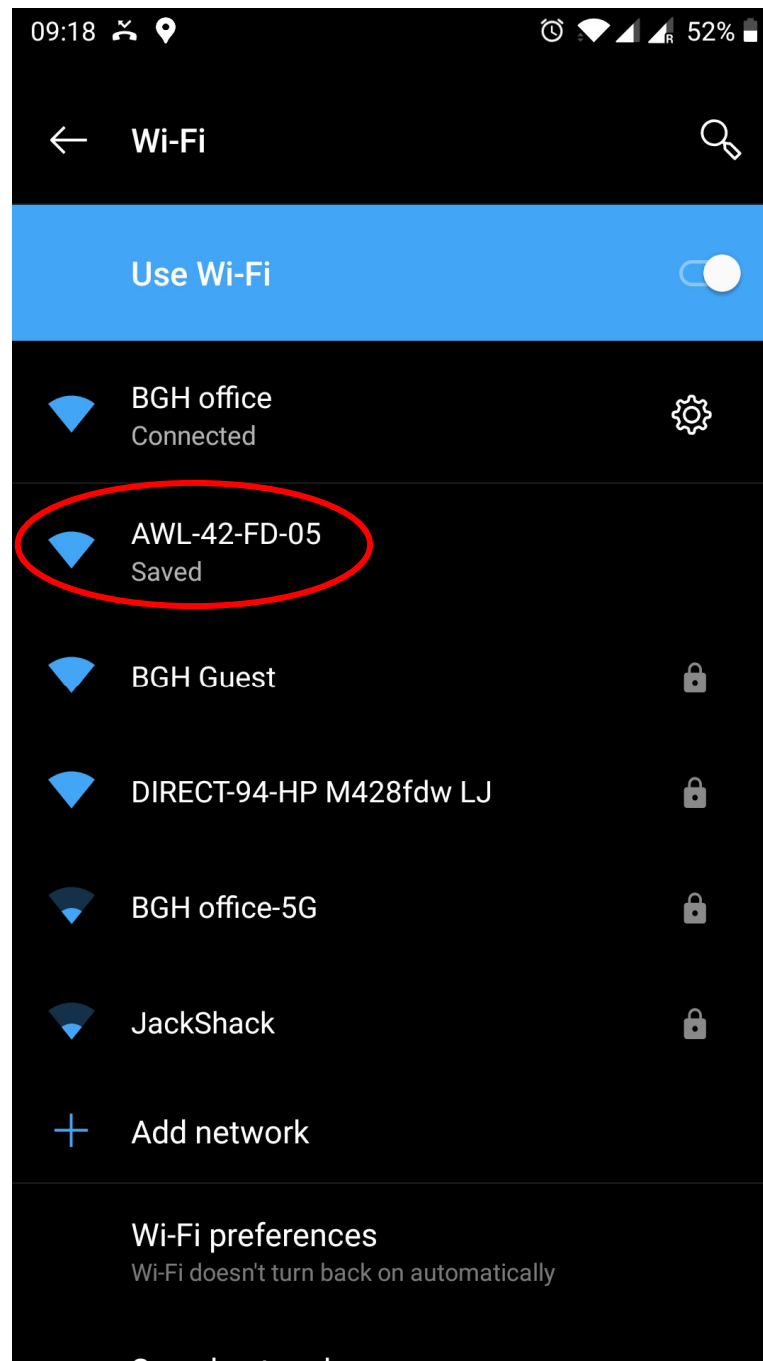

9. Open your Browser (Safari/Chrome) and type the Address 172.20.10.1 into the Address-Bar and hit Enter.

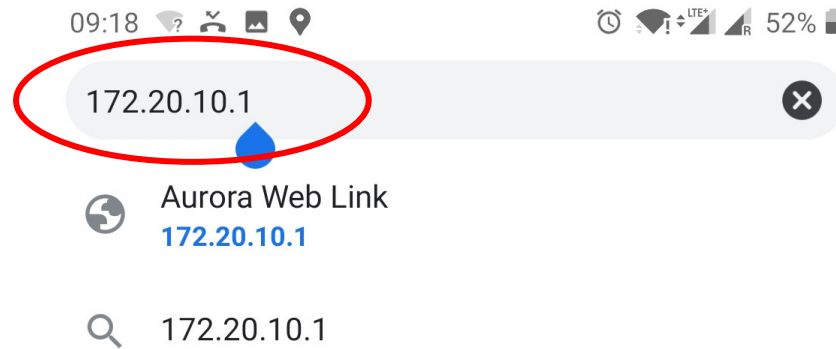

10. Select "AWL Configuration"

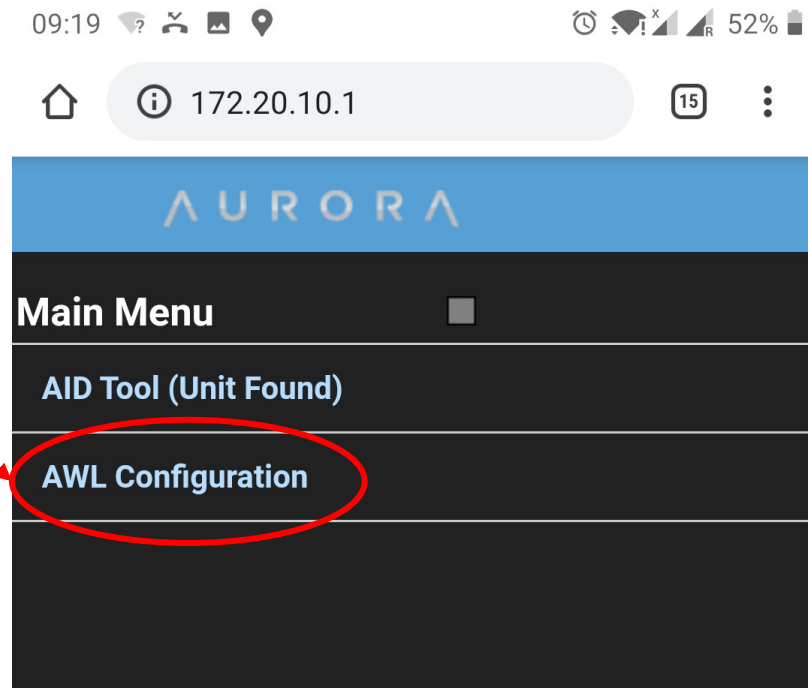

11. Select "Change Wi-Fi Network.."

09:19 52%


172.20.10.1/config.htm

← AURORA


Configuration

AWL ID	00 1E C0 42 FD 05
AWL ID CRC	9EB4
AWL Firmware	AWLSTD 1.02
Local Mode Web Version	1.05
Local AID Tool Units	US Units
Change AID Tool Units	
Wi-Fi Network Name	BGH office
Change Wi-Fi Network...	


12. Scan for Wi-Fi Networks

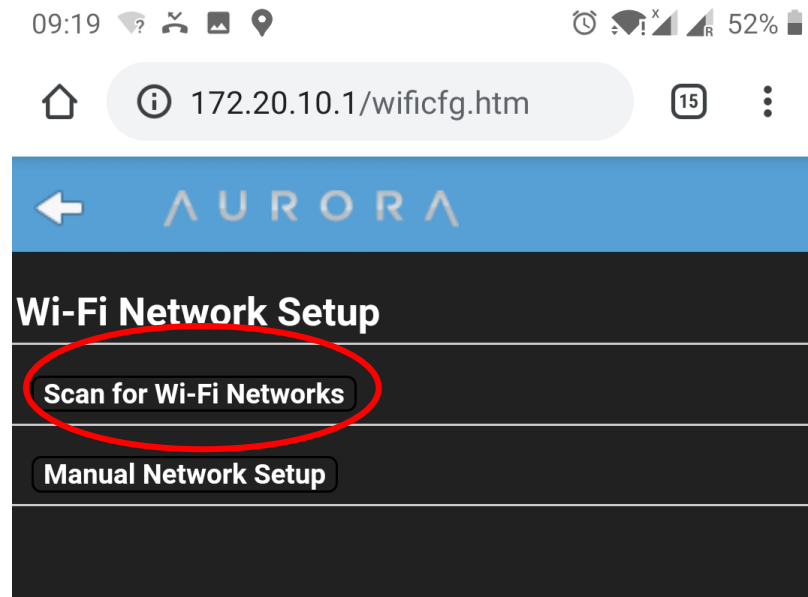


13. Select your Wi-Fi Network by clicking on it. In this case for example it is "BGH office"

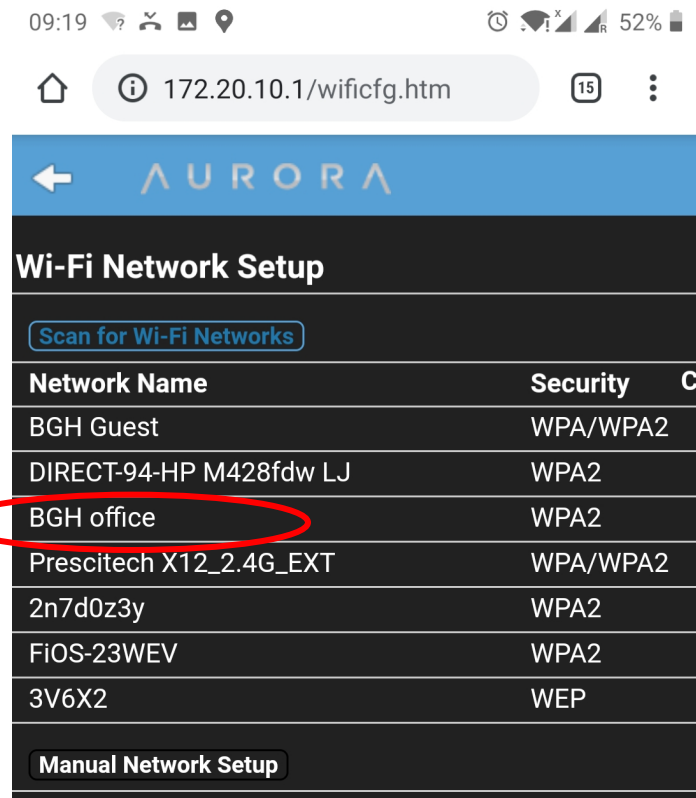

14. Enter your Wi-Fi Password (case sensitive) and save it with clicking on OK

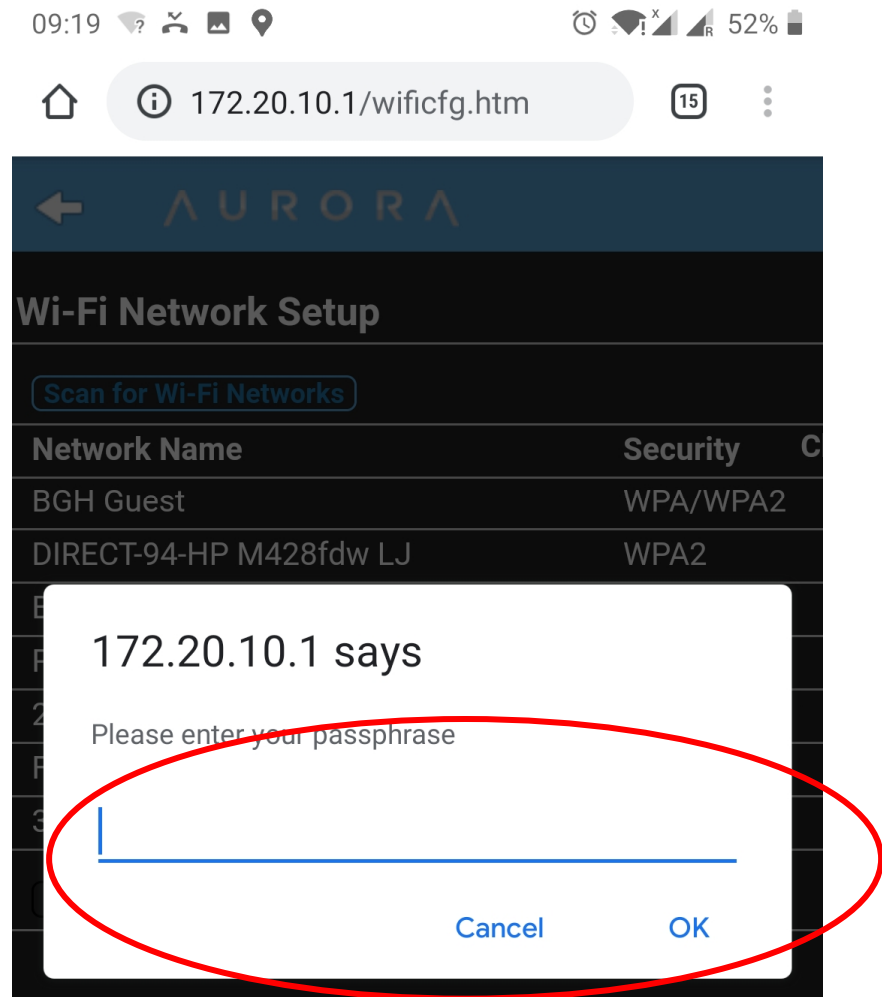

15. It will then display this message

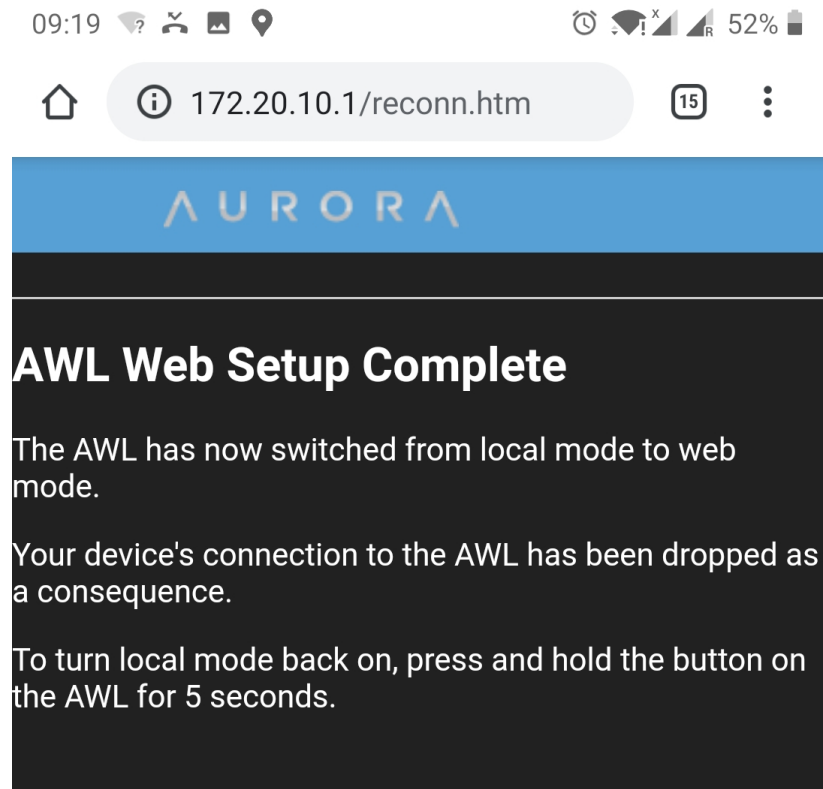

16. And the blue WIFI light will turn solid within in the next 120 seconds.

